



D0507 Codo 45° rosca macho UNF asiento JIC 37° a rosca macho NPT

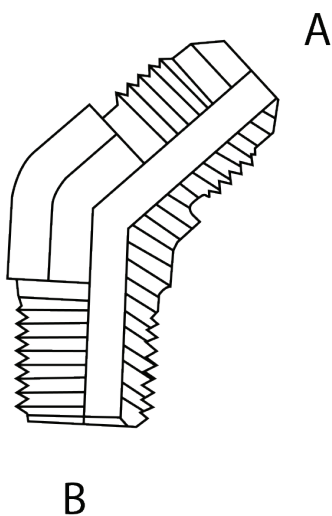

N° Código	Diámetro Exterior Tubo	Tamaño de Rosca	
		Rosca "A" JIC	Rosca "B" NPT
D0507-02-02	1/8"	5/16"-24	1/8"-27
D0507-03-02	3/16"	3/8"-24	1/8"-27
D0507-04-02	1/4"	7/16"-20	1/8"-27
D0507-04-04	1/4"	7/16"-20	1/4"-18
D0507-05-02	5/16"	1/2"-20	1/8"-27
D0507-05-04	5/16"	1/2"-20	1/4"-18
D0507-06-02	3/8"	9/16"-18	1/8"-27
D0507-06-04	3/8"	9/16"-18	1/4"-18
D0507-06-06	3/8"	9/16"-18	3/8"-18
D0507-06-08	3/8"	9/16"-18	1/2"-14
D0507-08-04	1/2"	3/4"-16	1/4"-18
D0507-08-06	1/2"	3/4"-16	3/8"-18
D0507-08-08	1/2"	3/4"-16	1/2"-14
D0507-08-12	1/2"	3/4"-16	3/4"-14
D0507-10-06	5/8"	7/8"-14	3/8"-18
D0507-10-08	5/8"	7/8"-14	1/2"-14
D0507-10-12	5/8"	7/8"-14	3/4"-14
D0507-12-08	3/4"	1 1/16"-12	1/2"-14
D0507-12-12	3/4"	1 1/16"-12	3/4"-14
D0507-14-12	7/8"	1 3/16"-12	3/4"-14
D0507-16-12	1"	1 5/16"-12	3/4"-14
D0507-16-16	1"	1 5/16"-12	1"-11 1/2
D0507-20-16	1 1/4"	1 5/8"-12	1"-11 1/2
D0507-20-20	1 1/4"	1 5/8"-12	1 1/4"-11 1/2
D0507-24-24	1 1/2"	1 7/8"-12	1 1/2"-11 1/2
D0507-32-32	2"	2 1/2"-12	2"-11 1/2

D0508 Codo 90° rosca macho UNF asiento JIC 37° a rosca macho UNF asiento JIC 37°

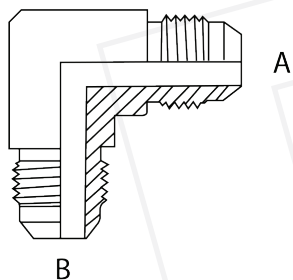

N° Código	Diámetro Exterior Tubo	Tamaño de Rosca	
		Rosca "A" JIC	Rosca "B" JIC
D0508-02-02	1/8"	5/16"-24	5/16"-24
D0508-03-03	3/16"	3/8"-24	3/8"-24
D0508-04-04	1/4"	7/16"-20	7/16"-20
D0508-05-05	5/16"	1/2"-20	1/2"-20
D0508-06-06	3/8"	9/16"-18	9/16"-18
D0508-08-08	1/2"	3/4"-16	3/4"-16
D0508-10-10	5/8"	7/8"-14	7/8"-14
D0508-12-12	3/4"	1 1/16"-12	1 1/16"-12
D0508-14-14	7/8"	1 3/16"-12	1 3/16"-12
D0508-16-16	1"	1 5/16"-12	1 5/16"-12
D0508-20-20	1 1/4"	1 5/8"-12	1 5/8"-12
D0508-24-24	1 1/2"	1 7/8"-12	1 7/8"-12
D0508-32-32	2"	2 1/2"-12	2 1/2"-12